


MAXXFAN[®]

INSTALLATION AND OPERATION INSTRUCTIONS

4 KEY WALL CONTROL 03540K & 03550K

5 KEY WALL CONTROL 03601K & 03651K

6 KEY WALL CONTROL 03600K & 03650K

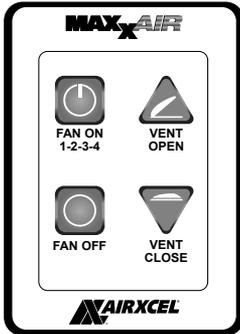

P/N: 00A03540K - White



P/N: 00A03550K - Black



P/N: 00A03601K - White



P/N: 00A03651K - Black




P/N: 00A03600K - White




P/N: 00A03650K - Black


INSTALLATION INSTRUCTIONS FOR ALL WALL CONTROLS

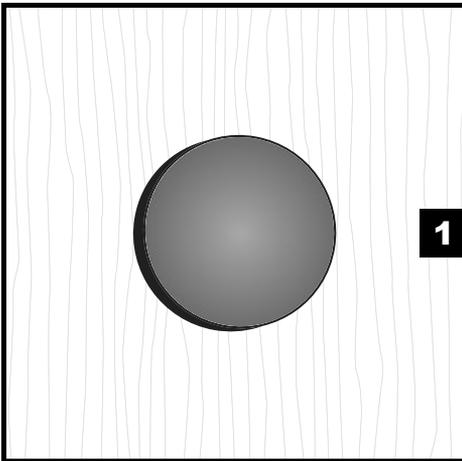


Drill a 1 1/4" hole at the approximate center position of wall control.

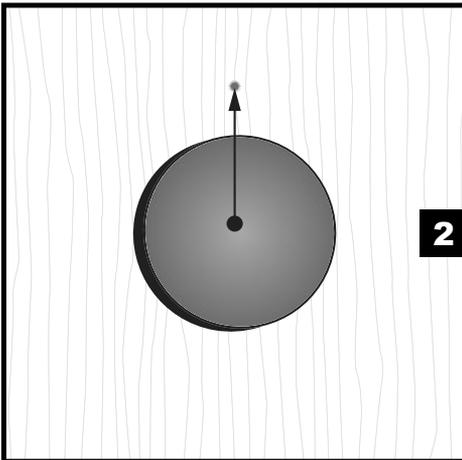


Mark a spot 15/16" above the center of the 1 1/4" hole

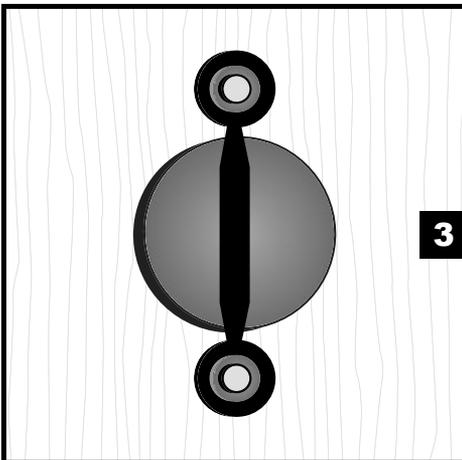


Align the top mounting tab hole with the spot marked in STEP 2.

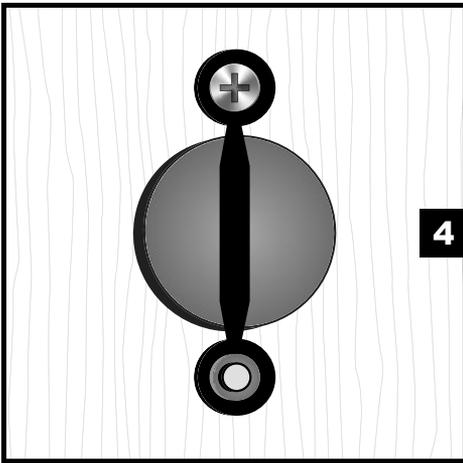


Install one (1) screw in the TOP mounting tab. Do not completely tighten.

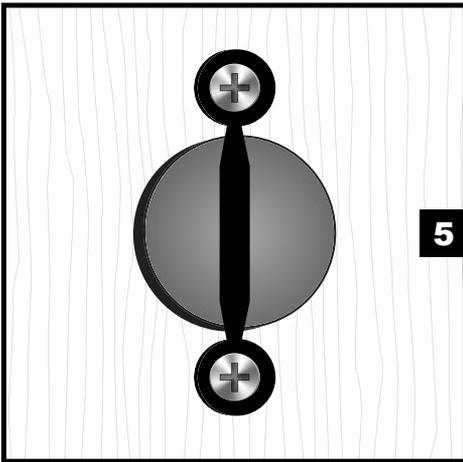


Make sure tabs are perpendicular to the floor and install the remaining screw in the BOTTOM mounting tab. Tighten both screws.

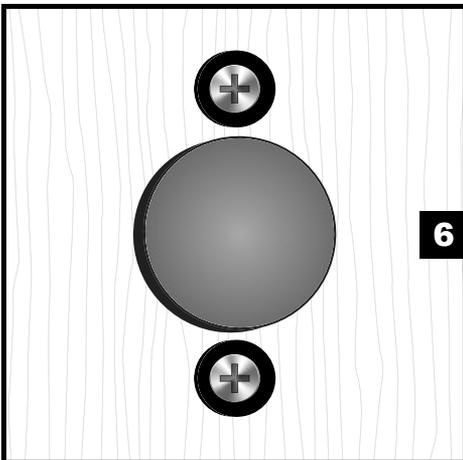


Break off the center tab by twisting.

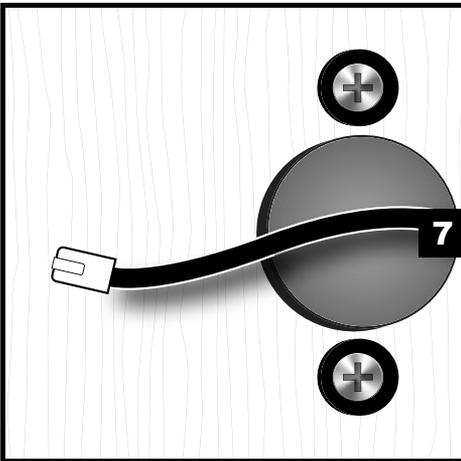

Route the data cable through the 1 1/4" cut hole in STEP 1.

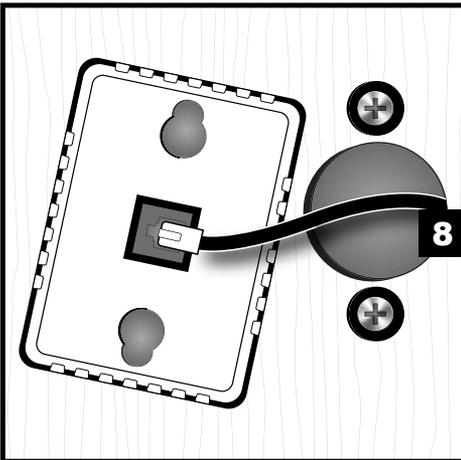

Plug the data cable into the back of the wall control.

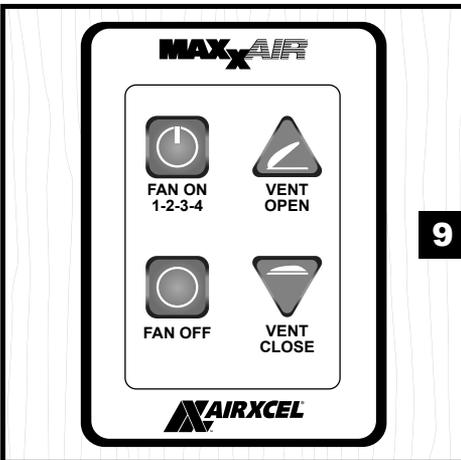


Align the wall control up with the mounting tabs. Slide the wall control down to lock it in place on the mounting tabs.

OPERATION INSTRUCTIONS

4 KEY WALL CONTROL 03540K & 03550K

FOR MAXXFAN® Plus models 4751KS & 4951KS
and MAXXFAN® Deluxe models 8751K & 8951K

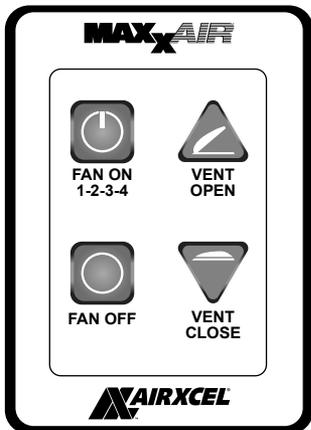

P/N: 00A03540K - White



P/N: 00A03550K - Black

WALL CONTROL FEATURES

- Allows fan control from convenient wall location
- Turns fan **ON** or **OFF**
- 4 Fan Speeds available
- **OPENS** or **CLOSES** Vent Lid
- Easy access to Ceiling Fan Mode
- Keypad controls at ceiling remain active (if applicable)

OPERATION OF 4 KEY WALL CONTROL

FAN ON 1-2-3-4	Turns the fan motor ON at the last selected speed and OPENS the Vent Lid.	<i>When Fan is running, cycles through four (4) fan Speeds. Once HIGH Speed is reached, the fan motor cycles back to LOW Speed.</i>
FAN OFF	Turns the Fan Motor OFF and CLOSES the Vent Lid	
VENT OPEN	OPENS the Vent Lid	<i>Fan motor remains in previous state</i>
VENT CLOSE	CLOSES the Vent Lid	<i>Fan motor remains in previous state. If fan motor is ON, the MAXXFAN enters Ceiling Fan Mode</i>

OPERATION INSTRUCTIONS

5 KEY WALL CONTROL 03601K & 03651K

FOR MAXXFAN® Plus models 4700K & 4900K
and MAXXFAN® Deluxe models 8700K thru 8900K



P/N: 00A03601K - White



P/N: 00A03651K - Black

WALL CONTROL FEATURES

- Allows fan control from convenient wall location
- Turns fan **ON** or **OFF**
- 10 Fan Speeds available
- **OPENS** or **CLOSES** Vent Lid
- Easy access to Ceiling Fan Mode
- Activate AUTO mode and set thermostat temperature

OPERATION OF 5 KEY WALL CONTROL

FAN ON/OFF	<p>Turns the fan motor ON at the last selected speed and OPENS the Vent Lid. Turns the fan motor OFF and CLOSES Vent Lid.</p> <p><i>Pressing this key when in AUTO mode will cause the fan to exit AUTO mode.</i></p>
AUTO	<p>Puts the fan in AUTOMATIC thermostat mode.</p> <p><i>Vent lid will automatically open and fan will turn on to cool RV when set temperature is reached. Once RV is cooled down, fan will turn off and vent lid will close. Thermostat is set to last selected temperature (memory function). Green LED will light to indicate MAXXFAN is in AUTO mode. Hold key for three (3) seconds to reset thermostat temperature to 78°F, use (+) & (-) keys to adjust set temperature up or down. Press ON/OFF key to exit AUTO mode.</i></p>
	<p>Adjusts the fan speed or thermostat set temperature.</p> <p><i>When fan is on in MANUAL mode: adjusts fan speed up or down from 10% to 100% (10 speeds). When fan is in AUTO mode: adjusts thermostat set temperature up or down by 1°F per key press.</i></p>
OPEN/CLOSE	<p>OPENS and CLOSES the motorized Vent Lid.</p> <p><i>Allows the vent lid to be open or closed with the fan motor on or off. Close vent lid with fan motor running in Manual mode to enter Ceiling Fan Mode.</i></p>
RAIN SENSOR MAXXFAN Plus Models Only	<p>Turns OFF the fan and CLOSES the lid if rain is detected.</p> <p><i>If you press any key to try and activate the fan, it will beep three (3) times to let you know the rain sensor is wet. Press any key to activate the fan after the rain sensor has dried. CAUTION: Rain Sensor will not close the MAXXFAN if the lid is opened manually with the knob.</i></p>

OPERATION INSTRUCTIONS

6 KEY WALL CONTROL 03600K & 03650K

FOR MAXXFAN® Plus models 4700K & 4900K
and MAXXFAN® Deluxe models 8700K thru 8900K



P/N: 00A03600K - White



P/N: 00A03650K - Black


WALL CONTROL FEATURES

- Allows fan control from convenient wall location
- Turns fan **ON** or **OFF**
- 10 Fan Speeds available
- **OPENS** or **CLOSES** Vent Lid
- Easy access to Ceiling Fan Mode
- Activate **AUTO** mode and set thermostat temperature
- Select **INTAKE** or **EXHAUST**

OPERATION OF 5 KEY WALL CONTROL

FAN ON/OFF	<p>Turns the fan motor ON at the last selected speed and OPENS the Vent Lid. Turns the fan motor OFF and CLOSES Vent Lid.</p> <p><i>Pressing this key when in AUTO mode will cause the fan to exit AUTO mode.</i></p>
AUTO	<p>Puts the fan in AUTOMATIC thermostat mode.</p> <p><i>Vent lid will automatically open and fan will turn on to cool RV when set temperature is reached. Once RV is cooled down, fan will turn off and vent lid will close. Thermostat is set to last selected temperature (memory function). Green LED will light to indicate MAXXFAN is in AUTO mode. Hold key for three (3) seconds to reset thermostat temperature to 78°F, use (+) & (-) keys to adjust set temperature up or down. Press ON/OFF key to exit AUTO mode.</i></p>
	<p>Adjusts the fan speed or thermostat set temperature.</p> <p><i>When fan is on in MANUAL mode: adjusts fan speed up or down from 10% to 100% (10 speeds). When fan is in AUTO mode: adjusts thermostat set temperature up or down by 1°F per key press.</i></p>
OPEN/CLOSE	<p>OPENS and CLOSES the motorized Vent Lid.</p> <p><i>Allows the vent lid to be open or closed with the fan motor on or off. Close vent lid with fan motor running in Manual mode to enter Ceiling Fan Mode.</i></p>
IN/OUT	<p>Reverses fan motor for either INTAKE or EXHAUST air direction.</p>
RAIN SENSOR MAXXFAN Plus Models Only	<p>Turns OFF the fan and CLOSES the lid if rain is detected.</p> <p><i>If you press any key to try and activate the fan, it will beep three (3) times to let you know the rain sensor is wet. Press any key to activate the fan after the rain sensor has dried. CAUTION: Rain Sensor will not close the MAXXFAN if the lid is opened manually with the knob.</i></p>

ENJOY your new **MAXXFAN®** or **MAXXFAN® Plus** in all weather conditions with the **NEW FANMATE®**
FEATURING **EZClip™** Hardware

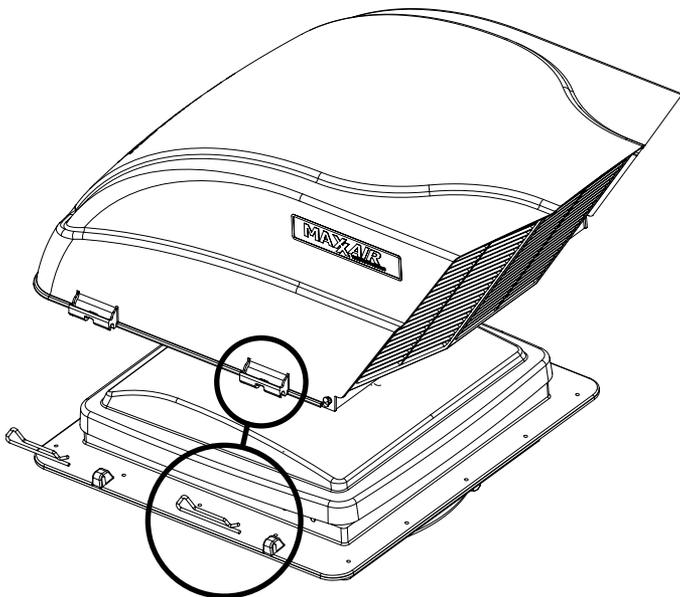

- ▶ **SUPERIOR** rain protection
- ▶ **LESS** than 5% airflow restriction
- ▶ **UNIQUE** design allows for use on ANY high powered or non-powered ceiling fan or vent
- ▶ **OPTIONAL** bug screen
- ▶ **FULL ACCESS** to the fan and optional bug screen courtesy of the **EZClip™**

EZClip™

QUICK, EASY and TOOL-FREE INSTALLATION

The **FANMATE** simply fits over the molded, waterproof mounting tabs built into YOUR **MAXXFAN** or **MAXXFAN Plus**. Simply **SLIDE** the included clip through the tab to secure the **FANMATE** cover. **FRESH AIR, RAIN OR SHINE!**



AVAILABLE IN



*Warranty limited to repair or replacement, see Airxcel.com for details.

**For additional product information please visit
www.AIRXCEL.com**



AIRXCEL, INC. - RV Products Division
3050 N. St. Francis St. • Wichita, KS 67219 • 316-832-3400

